

The Ultimate X-Brake Factor Tool



How to measure Brake Caliper X-Factor...?

The Ultimate X- Brake Factor Tool

Is a Patent Pending product from Wheel Consultants, Inc., the publisher of The Ultimate Wheel & Tire Plus Sizing Guide, "The Red Book"




Made in USA

The Ultimate X- Brake Factor Tool

Is the fast, easy, and the simplest way to measure the Brake X-Factor (caliper overhang) of the vehicle before ordering or installing wheels. The Tool Consists of a 14 piece set of "Go-No Go" gages laser cut from 6061-T6 aluminum, ranging in size from 0mm to 52mm in 4mm increments. Each gage is engraved with an X- and a number representing the caliper overhang in millimeters. Each part is anodized red for long service life.

Easy to use

Place the base of a gage against the vehicle mounting pad until the gage with the proper clearance is determined. Note in the example, X-32 represent a 32mm distance from mounting pad to the outer most contact of the caliper.

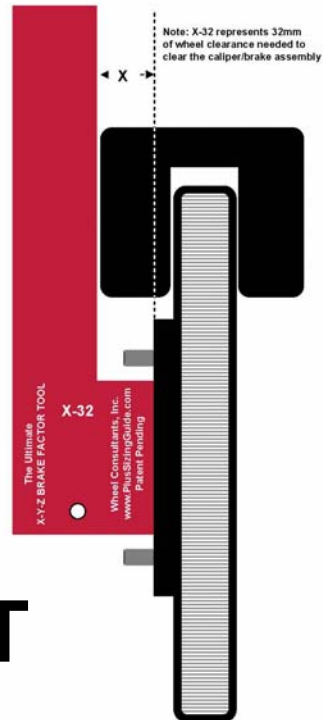

For More Information and to Order
Visit the website:
www.PlusSizingGuide.com

Or Contact :
Wheel Consultants, Inc.
2537-D Pacific Coast Hwy #330
Torrance, CA 90505
Phone 310-357-7293
Fax 310-427-7199
E-mail: sales@PlusSizingGuide.com

\$99/SET

